



 
22130 S. Vermont Ave. Unit E Torrance, CA 90502  
 phone: 310-618-9619 fax: 310-618-9620

## SM-2 & Freedom Users Manual Addenda

For models equipped with Option-01 / OPT-11 built in CD

**Important:** Leave the push button volume controls on the CD player at the maximum setting (25) and adjust the CD player volume only with the rotary volume knob on the panel for best results.

### Playback

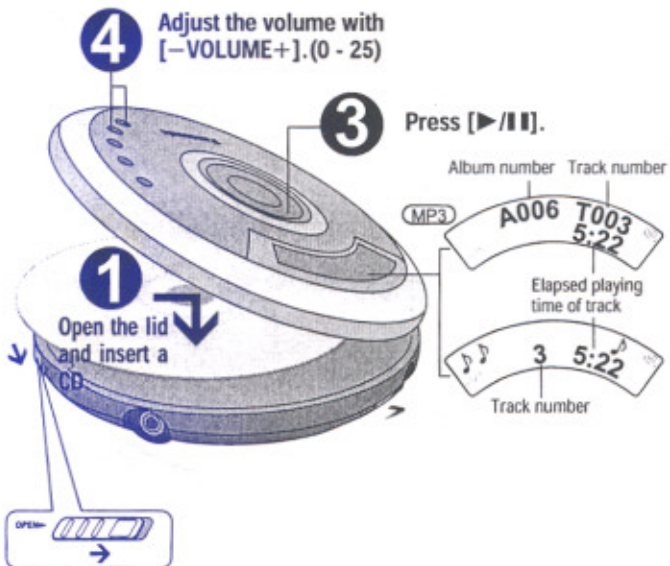

### Pause



Press.

■ Press again to restart play.

### Search



Press and hold during play.

■ You cannot search while playing MP3.  
 ■ You can search only within the current track during program, one-track repeat, or random play modes (↔ page 6).

### Skip



Press.

 
■ Press [⏮] twice to skip to the previous track during play.

### Stop



Press.

■ Press again to turn the unit off.

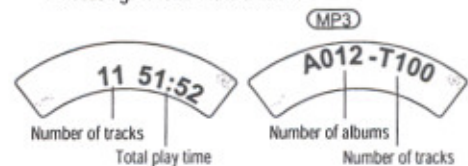


## Program Play

- 1 Select the tracks while stopped.  
When programming WMA/MP3 tracks, you can skip albums before selecting tracks (→ below).



- 2 Press to register.

 MEMO/ = DISP

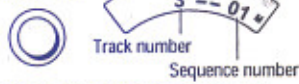

■ To confirm the contents of the program  
Press [MEMO/ = DISP] while the disc is playing.

■ To delete the entire program  
Press [DEL].


- 3 Repeat steps 1 and 2 to register up to 20 tracks.

- 4 Start play.



## Changing the sound quality

 Each time you press [EQ]

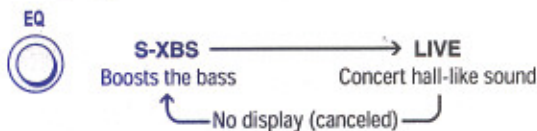


■ The effect may differ between different kinds of music.

## Playing MP3

 
### Starting play from an album (Album skip)

Press and hold until the album you want appears.

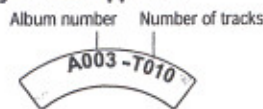

### Playing only the tracks in a selected album (Album mode)

 Each time you press and hold [MODE]

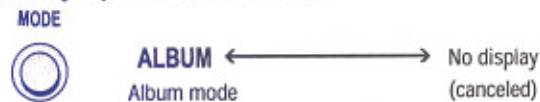


- You cannot turn album mode on during program play.
- You can select another album with album skip.

### Changing the display

 Each time you press and hold [MEMO/ = DISP]


MEMO/ = DISP

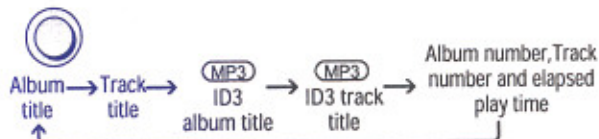

- The unit displays up to 27 characters for track title and 30 for album title.
- "\_" is displayed in place of characters this unit cannot display.
- "Album Title" and "Track Title" appear on the top line when showing album and track titles.
- MP3 : "TAG" appears when displaying ID3 titles. "-- --" appears instead if ID3 titles haven't been entered.

## Play modes

 Each time you press [MODE]

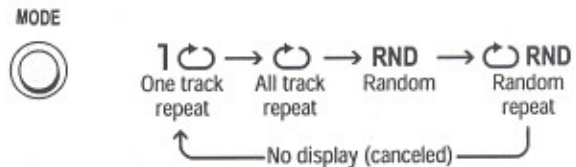


- You cannot select "RND" while playing MP3.
- You cannot skip back to other tracks during random play.

## Anti-Skip System

 This system reduces the skipping caused by vibration to a minimum. You can change the anti-skip memory time for CD-DA to improve sound quality.

Each time you press and hold [MODE]

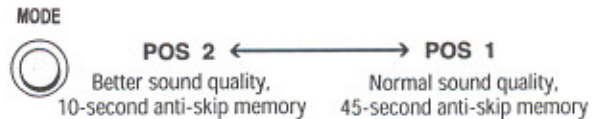

- You cannot change the memory time for MP3. It is a maximum of 130 seconds for WMA recorded at 96 kbps and 100 seconds for MP3 recorded at 128 kbps.