


User Guide

For OPT-100 CD/MP3-USB Player




560-22 Rev A opt-100, 07/07
www.soundprojections.com

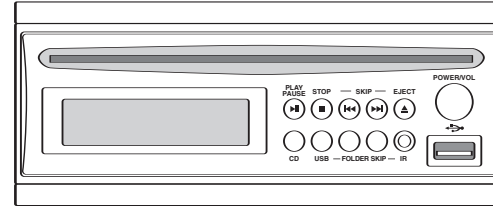

Built-in CD/MP3 Player with USB

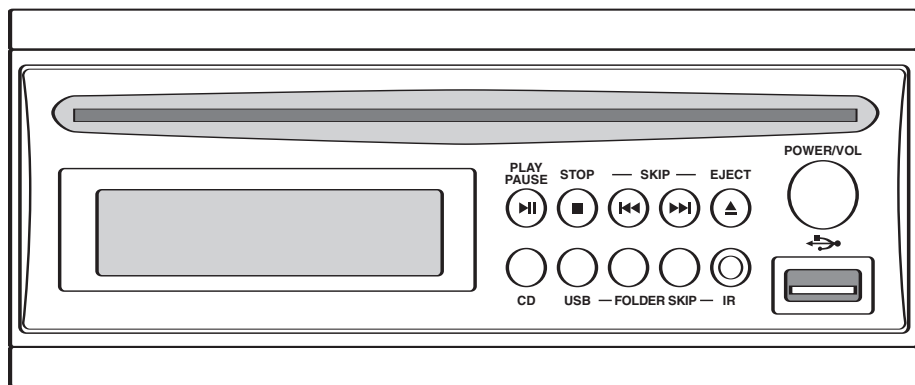


This addendum is for Sound Systems with optional built-in CD/MP3 player (opt-100). If your CD player does not look like the image below, contact Sound Projections for the correct instructions for your player.



Operating the CD Player

1. Turn the sound system's main power "on."
2. Push the **POWER/VOL** button on the CD player to activate it (the LCD panel will light).
3. Gently push a CD into slot until auto-load mechanism responds
Note: Do not force CD into player, as damage may result.


CD Playback

1. Press the **PLAY/PAUSE** button .
2. Adjust the volume control knob on the CD player.
 - To pause, press the **PLAY/PAUSE** button; press again to resume play.
 - To skip forward during play or program mode press **SKIP** , or press **SKIP**  to skip back to the previous song.
If song is playing, press and hold **SKIP** buttons for fast cue (search).
 - To stop, press the **STOP** button.
 - Press the **EJECT** button to remove the CD.

MP3 Playback (MP3 songs recorded to CD)

- To start play from a folder, press the **FOLDER SKIP** buttons until the folder you want appears. During playback, use the **FOLDER SKIP UP** and **FOLDER SKIP DOWN** buttons to move to other folders.
- Press the **PLAY/PAUSE** button to play the first song of the folder.

USB Playback (MP3 songs recorded to USB key)

1. Insert a USB memory key into the unit.
 2. Press the **USB** button .
 - To start play from a folder, press the **FOLDER SKIP** buttons until the folder you want appears. During playback, use the **FOLDER SKIP UP** and **FOLDER SKIP DOWN** buttons to move to other folders.
 - Press the **PLAY/PAUSE** button to play the first song of the album/folder.
- !! **Note:** Be sure to turn the CD/MP3 player off before removing the USB key.

Play Mode (note: accessible only by play MODE BUTTON on remote control)

Press **PLAY MODE** key one or more times to select one of the following modes: Play all random, Repeat track, Repeat all, Random repeat, and Play all.

Program Play (note: programming feature requires the remote control)

To program songs/tracks on CD

1. Insert CD. Press **PROG** key on remote control to enter program mode.
2. Enter desired song using keys 0 - 9, followed by the **PROG** key. Repeat until all songs are programmed (display will return to normal after approximately 10 seconds).
3. To play programmed songs, press **PROG** followed by **PLAY**. (note: to play songs in normal sequence, press **PLAY** only.)
4. To clear programmed songs, press **PROG** followed by **STOP**.

To program MP3 songs/tracks recorded to CD or USB key

1. Insert CD with MP3 songs or USB key with MP3 songs.
2. Press **PROG** key on remote and enter desired folder using keys 0 - 9, press **PROG** again and enter desired track. Repeat until all songs are programmed, press **PROG** key when complete (display will return to normal after approximately 10 seconds).
3. To play programmed songs, press **PROG** followed by **PLAY**. (note: to play songs in normal sequence, press **PLAY** only.)
4. To clear programmed songs, press **PROG** followed by **STOP**.
5. To view folder description, press **DISPLAY** key on remote.