


# User Guide

## For OPT-200 CD/MP3 Player with Pitch Control

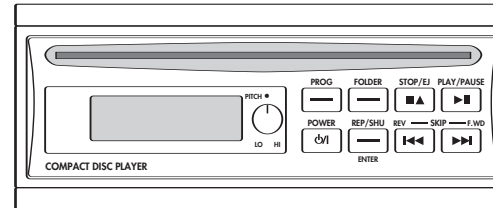


560-24 Rev A opt-200, 07/07  
[www.soundprojections.com](http://www.soundprojections.com)



## Built-in CD/MP3 Player with Pitch Control



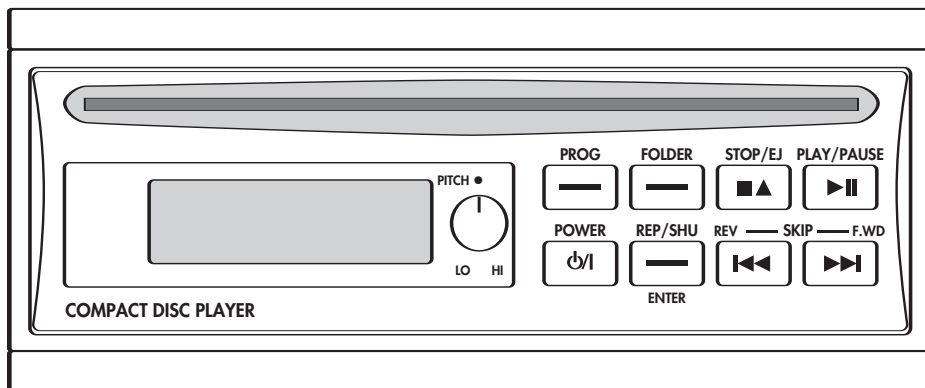

This addendum is for Sound Systems with optional built-in CD/MP3 player (opt-200). If your CD player does not look like the image below, contact Sound Projections for the correct instructions for your player.





### Operating the CD Player

1. Turn the sound system's main power "on."
2. Push the **POWER** button on the CD player to activate it (the LCD panel will light).
3. Gently push a CD into slot until auto-load mechanism responds  
**Note:** Do not force CD into player, as damage may result.

### CD Playback


1. Press the **PLAY/PAUSE** button .
2. Adjust the volume control knob labeled "CD" on the sound system's control panel.
  - To pause, press the **PLAY/PAUSE** button; press again to resume play.
  - To skip forward during play or program mode press **SKIP F.WD** , or press **SKIP REV**  to skip back to the previous song.  
If song is playing, press and hold **SKIP** buttons for fast cue (search).
  - Use the **PITCH** knob to vary the speed at which the song is played. For normal speed/pitch, set the knob at the top indent.
  - To stop, press the **STOP/EJ**  button.
  - Press the **STOP/EJ** button to remove the CD.

### MP3 Playback (MP3 songs recorded to CD)

- To start play from a folder, press the **FOLDER** button ("FOLDER" appears in display) and then press **SKIP F.WD**  or **SKIP REV**  to select a folder.
- Press the **FOLDER** button again ("FOLDER" disappears in display), then use the **SKIP F.WD** or **SKIP REV** buttons to select a song within that folder
- Press the **PLAY/PAUSE** button to play the programmed songs.





### Play Mode

Upon turn-on, the default play mode is REPEAT ALL.



Pressing the **REP/SHU** button  allows the user to select REPEAT ALL, REPEAT 1, SHUFFLE or normal play modes (display indicates modes).

### Program Play

#### To program songs/tracks on CD

1. Insert CD. Press the **PROG** button  to enter program mode.
2. Press the **SKIP F.WD**  or **SKIP REV**  buttons to select a song, then press the **ENTER** button  to store that song.
3. Repeat step 2 until all songs are programmed.
4. Press the **PLAY/PAUSE** button to play the programmed songs.
  - To clear programmed songs, press the **PROG** button again.

#### To program MP3 songs/tracks recorded to CD

1. Insert CD. Press the **PROG** button  to enter program mode.
2. Select folder and track as described in MP3 playback, then press the **ENTER** button  to store that song.
3. Repeat step 2 until all songs are programmed.
4. Press the **PLAY/PAUSE** button to play the programmed songs.
  - To clear programmed songs, press the **PROG** button again.