



If you haven't installed the battery, do it now and leave the cover off.



Turn **ON** the handheld or bodypack transmitter by pressing the power button.

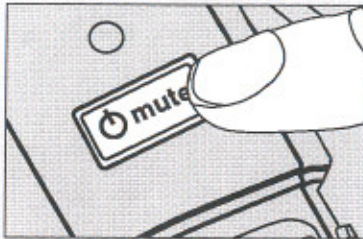


The channel display should illuminate.

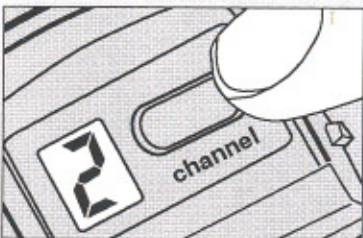


It turns off after ten seconds to conserve battery.

Check to see that the transmitter and the receiver display the same channel.

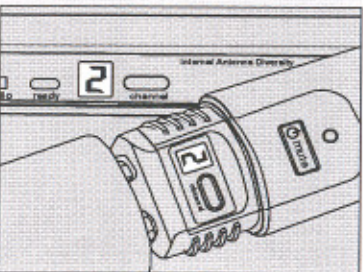

The ready LED on the receiver should be illuminated.

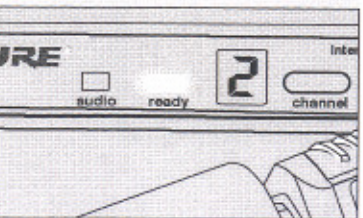


Replace battery cover.

Features

Busy Indicator

When selecting channels, a flashing dash indicates interference from television broadcasts, electronic devices or other wireless systems.

If this occurs, change the channel.

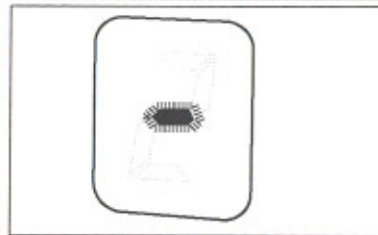


Changing Channels


Press and hold the channel button until the display starts flashing.

While the display is flashing, press the channel button.

The channel is active once the display stops flashing.

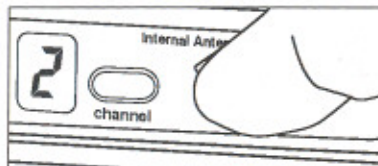


Receiver and transmitter channels should match.

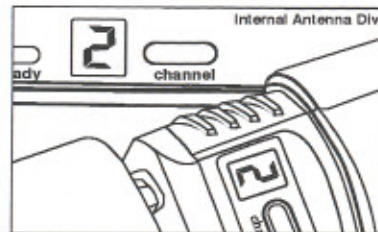

Testing Audio

Talk or sing into the microphone or play instrument.

The audio LED on the receiver should flicker green or amber, if red, adjust the Gain Switch.

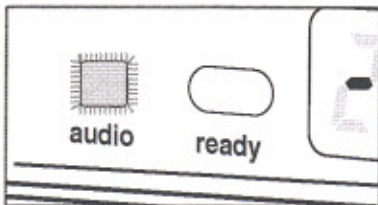

Locking and Unlocking Transmitter Controls



Lock system controls to prevent accidental muting.

To lock controls: Turn transmitter off. Remove Battery Cover. Press and hold Channel Button. Press and release Power/Mute button. Power/Mute LED will flash red and green.

To unlock controls: Press and hold Power/Mute button down until Power/Mute LED flashes red and green.

Accessing Gain Switch

Multiple gain settings are available on the PG1 and PG2 transmitters. To change gain settings, see below.

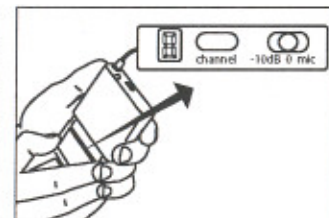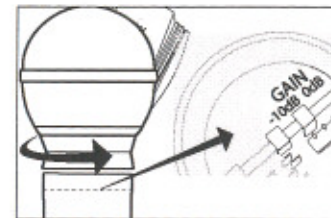


- 0dB** For instrument or quiet to normal vocal performance (default).
- 10dB** Use if audio is distorted due to high vocal or instrument levels.
- mic** Use for headworn or lavalier microphones (PG1 only).

Wearing the Bodypack Transmitter

Clip the transmitter to belt or guitar strap as shown.

Make sure the antenna is unobstructed.

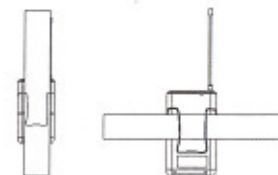

Changing Battery

Expected life for a 9 volt alkaline battery is approximately 8 hours. When the Power/Mute LED glows red, the battery should be replaced immediately.