

Program Play

To program tracks on CD (not MP3)

1. Insert CD. Press **PROG** button to enter program mode.
2. Enter selected track by using the **I◀◀SKIP▶▶I** buttons followed by **PROG** button. Repeat until all tracks are programmed.
(**NOTE:** When using the remote control for programming, selected tracks may be entered directly by using the 0 through 9 numbers on the remote control keypad).
3. To play programmed tracks, press **PLAY** button.
(**NOTE:** To return to normal play mode from program mode, press **STOP** button followed by **PLAY** button. To return back to program mode press **STOP** button followed by **PROG** button followed by **PLAY** button)
4. To clear programmed tracks, press **PROG** button followed by **STOP** button.
(**NOTE:** Programed tracks will be erased upon power off of the CD player)

To program MP3 tracks on CD or USB key

1. Insert CD or USB key. Press **PROG** button to enter program mode.
2. Press the **I◀◀SKIP▶▶I** buttons to select folder. Press **PROG** button again followed by **I◀◀SKIP▶▶I** buttons for desired track followed by **PROG** button. Repeat until all tracks are programmed.
3. To play programmed tracks, press **PLAY** button.
(**NOTE:** to return to normal play mode from program mode, press **STOP** button followed by **PLAY** button. To return back to program mode press **STOP** button followed by **PROG** button followed by **PLAY** button)
4. To clear programmed tracks, press **PROG** button followed by **STOP** button.
(**NOTE:** Programed tracks will be erased upon power off of the CD player)

ESP button (Electronic Shock Protection, *APPLIES TO CD ONLY*)


The **ESP** button turns Electronic Shock Protection off/on. ESP on is default.
(**NOTE:** Recommend to Always leave ESP set to “on”)

ID3 button (on remote control only)

Press **ID3** button to display the title, artist, or album on upper display line. Tracks without this program information may display nothing.

User Guide

For OPT-101 CD/MP3-USB Player

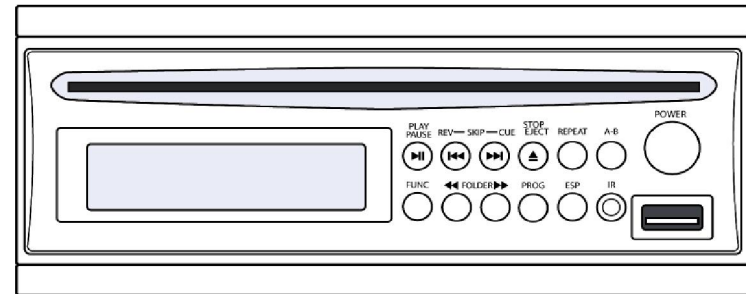

560-0031 Rev A opt-101 02/2013
www.soundprojections.com



BEFORE YOU BEGIN:

The OPT-101 will play Compact Discs recorded in standard format and MP3 files recorded to CD and to USB key.


NOTE: If you plan to copy MP3 files from your iTunes directory, make sure your import settings are correct. By default, iTunes imports files as .AAC, not .MP3. Please follow the steps below to verify your iTunes settings:

- Open your iTunes program
- Click Edit > Preferences
- Under the "General Tab", click the "Import Settings" button
- Verify "import using" > MP3 Encoder

By changing this setting, all FUTURE imports will be saved as .MP3. Any files that you have already saved in other formats will have to be converted to .MP3 before they can be played in the OPT -101 player.

Built-in CD/MP3 Player with USB

This User Guide is for Sound Systems with the optional built-in CD/MP3 player (OPT-101). If your CD player does not look like the image below, contact Sound Projections for the correct instructions for your player.

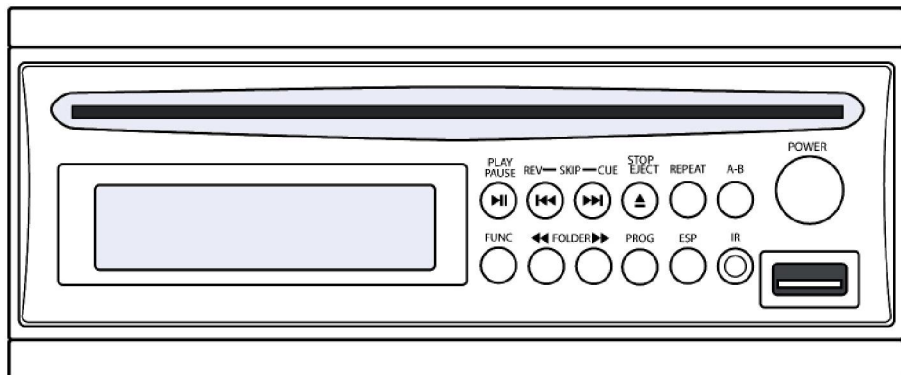


Operating the CD Player

1. Turn the sound system's main power "on".
2. CD Player will automatically turn on when system is turned on.
3. Gently push a CD into the slot until the auto-load mechanism responds
Note: Do not force CD into player, as damage may result
4. To turn off player, push and hold Power button until screen displays "good bye".

!! Caution: This player does not accept 8-cm diameter CD's.

CD Playback

1. Press the **Play** button .
2. Adjust the volume control knob on the main system.
 - To Pause, press the **Pause** button; press again to resume play.
 - To skip tracks press **I<<SKIP>>I**.
To fast forward or reverse: Press, and hold, the **I<<SKIP>>I**.
 - To stop, press the **STOP/EJECT** button
 - Press the **STOP/EJECT** button again to remove the CD.

Playback of MP3 tracks recorded on CD

1. Insert a CD into the unit.
2. Press the **FUNC** button until the "CD" is displayed
3. Press the **PLAY** button to begin play of first MP3 track. (**NOTE:** If all MP3 tracks are in folders, playback will begin on first track of first folder)
4. To play a desired track: Press the **<<FOLDER>>** buttons until the specific folder is displayed. Press the **I<<SKIP>>I** buttons to select specific track. (**NOTE:** During playback, you may use the **<<FOLDER>>** buttons to change to other folders.)

Playback of MP3 tracks recorded to USB

1. Insert a USB memory key into the unit.
2. Press the **FUNC** button until the "USB" is displayed
3. Press the **PLAY** button to begin play of first MP3 track. (**NOTE:** If all MP3 tracks are in folders, playback will begin on first track of first folder)
4. To play a desired track: Press the **<<FOLDER>>** buttons until the specific folder is displayed. Press the **I<<SKIP>>I** buttons to select specific track. (**NOTE:** During playback, you may use the **<<FOLDER>>** buttons to change to other folders.)

!! NOTE: Be sure to turn the CD/MP3 player off before removing the USB key.

Repeat Mode

Press **REPEAT** button one or more times to select one of the following modes: Repeat Track, Repeat Folder (.MP3 mode only), Repeat All, Play All Random, and Play All.

A-B Mode (use to select a portion of a track to playback repeatedly)

While track is playing, press the **A-B** button once at the beginning of the portion you want to select (B will begin flashing in the display). Press the **A-B** button again to select the end of the section you wish to playback. The selected section will then play repeatedly.

To return to normal play, press the **A-B** button again.