

## Group and Channel settings:

**SHURE**

Frequency (MHz)	TV CH	H11	J10
584.300	33	o1	E1
586.650	33	o3	d2
587.600	33	A2	J3
587.700	33	E4	A5
588.850	33	A4	P4
589.975	33	d8	F4
590.150	34	b4	L1
592.400	34	A8	A2
594.700	34	b3	E2
595.850	34	J9	F8

Frequency (MHz)	TV CH	J11	J10
596.150	35	B1	H5
596.300	35	o1	b2
597.850	35	b2	H6
599.850	35	P4	U4
600.625	35	H4	H8
602.900	36	d4	o5
607.075	36	C6	E0
607.500	36	o9	o8
607.700	36	F8	Y5

Attachment Link(s)

Last Edit Date